

Mini Dogeroo

Part No. 87062
Revised June 1996

Instruction Manual Model #8008




 **GOLD MEDAL[®]**


FUNFOOD EQUIPMENT & SUPPLIES


Cincinnati, OH 45241-4807 USA


SAFETY PRECAUTIONS

	⚠ CAUTION
	This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.

	⚠ WARNING
	Always wear safety glasses when servicing this equipment.

	⚠ WARNING
	NEVER put your fingers or any object into the heating area. We do NOT assume any liability for injury due to careless handling or operation of this equipment.


	⚠ WARNING
	Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock.</p>

1. Carefully remove the machine from the shipping cartons. Remove all packing material and tape. Check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company.
2. The glass has been packaged for shipment and placed between cardboard. Remove the package and carefully unwrap the glass.
3. Set the cabinet assembly on the counter where you intend to use it so that the bun decal is positioned outward, then lift off the band wrapper weld assembly.
4. Insert the glass into the channel slots in the corner posts and slide the glass down to the bottom of the unit. CAUTION: Do not drop the glass. If optional sneeze guard has been purchased, place it over the corner posts.
5. Set the band wrapper weld assembly on the cabinet. Make sure it is seated at each corner.
6. Place the water pan in the band wrapper.
7. Place the bun warmer on the band wrapper.
8. Slide the condensate liner into the top of the bun warmer.
9. Place the partition bottom in the bottom of the bun warmer and then place the bun basket on top of the partition.
10. Place the door in position and inset the pivot pin into the holes.
11. Place the rotisserie in position. The following procedure is suggested:
 - a. Place the washer end in the end support.
 - b. Apply outward pressure on the lower part of the motor section with one hand while inserting the end with the spring pin into the coupling.
 - c. Rotate the rotisserie until it drops into the coupling slots.
12. Place the drip pan in the cabinet.
13. Be sure to place your Mini Dogeroo where the revolving hot dogs will attract the most attention. Connect the lead-in cord to a suitable outlet of the correct voltage.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

ON-OFF SWITCH

When in the "ON" position, this switch engages the drive motor for the rotisserie and lights the bulb behind the front glass.


HEAT CONTROL

When turned on this control lights the red pilot light. In the "HI" position, the heating element is energized continuously. At all other positions between "HI" and "LO", the element controls the temperature by turning itself on and off.

MACHINE OPERATION

1. Fill the water pan with water up to the first level (about one quart) to keep the buns moist and warm. Use hot water for quicker results.
2. Place buns in the bun warmer basket. NOTE: Because of their texture, some buns collect more moisture than others.
3. Place the hot dogs on the rotisserie.
4. Turn the motor drive switch to the "ON" position. This should start the rotisserie rotating and light the bulb.
5. The time required to broil the hot dogs will vary according to the size and temperature of the hot dogs placed in the Mini Dogeroo. With the heat control set on "HI", and using average size hot dogs, it will take 15-18 minutes to have the hot dogs ready for serving. Watch the hot dogs carefully the first few times you cook them to avoid splitting the outer skin.

CARE AND CLEANING

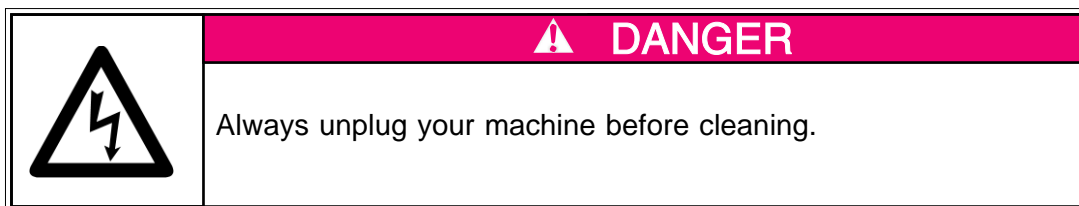



Good sanitation practice demands that all food cooking equipment be cleaned regularly. A clean looking, well kept machine is one of the best ways of advertising your product.


The Mini Dogeroo has been designed to disassemble quickly and easily for cleaning without the use of special tools.

1. Disconnect the power supply cord. Be sure the unit has cooled sufficiently to permit safe handling.
2. Remove the rotisserie by placing one hand on the lower part of the motor section while pushing the rotisserie towards the end support with the other hand. NOTE: Each basket of the rotisserie has an end stop. The rotisserie can best be removed by guiding the coupling between these stops as the rotisserie is withdrawn. Then remove the bun warmer tray, water pan, and the bottom partition for cleaning.
3. Soak the rotisserie in boiling hot soapy water to clean.
4. Clean other trays with mild detergent and warm water.
5. Clean the panels near the heating element with a damp cloth.
6. Replace the removable parts for normal operation.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p>

	⚠ WARNING
	<p>Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.</p>

	⚠ DANGER
	<p>Unplug your machine before servicing.</p>

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

MAIN DRIVE ASSEMBLY

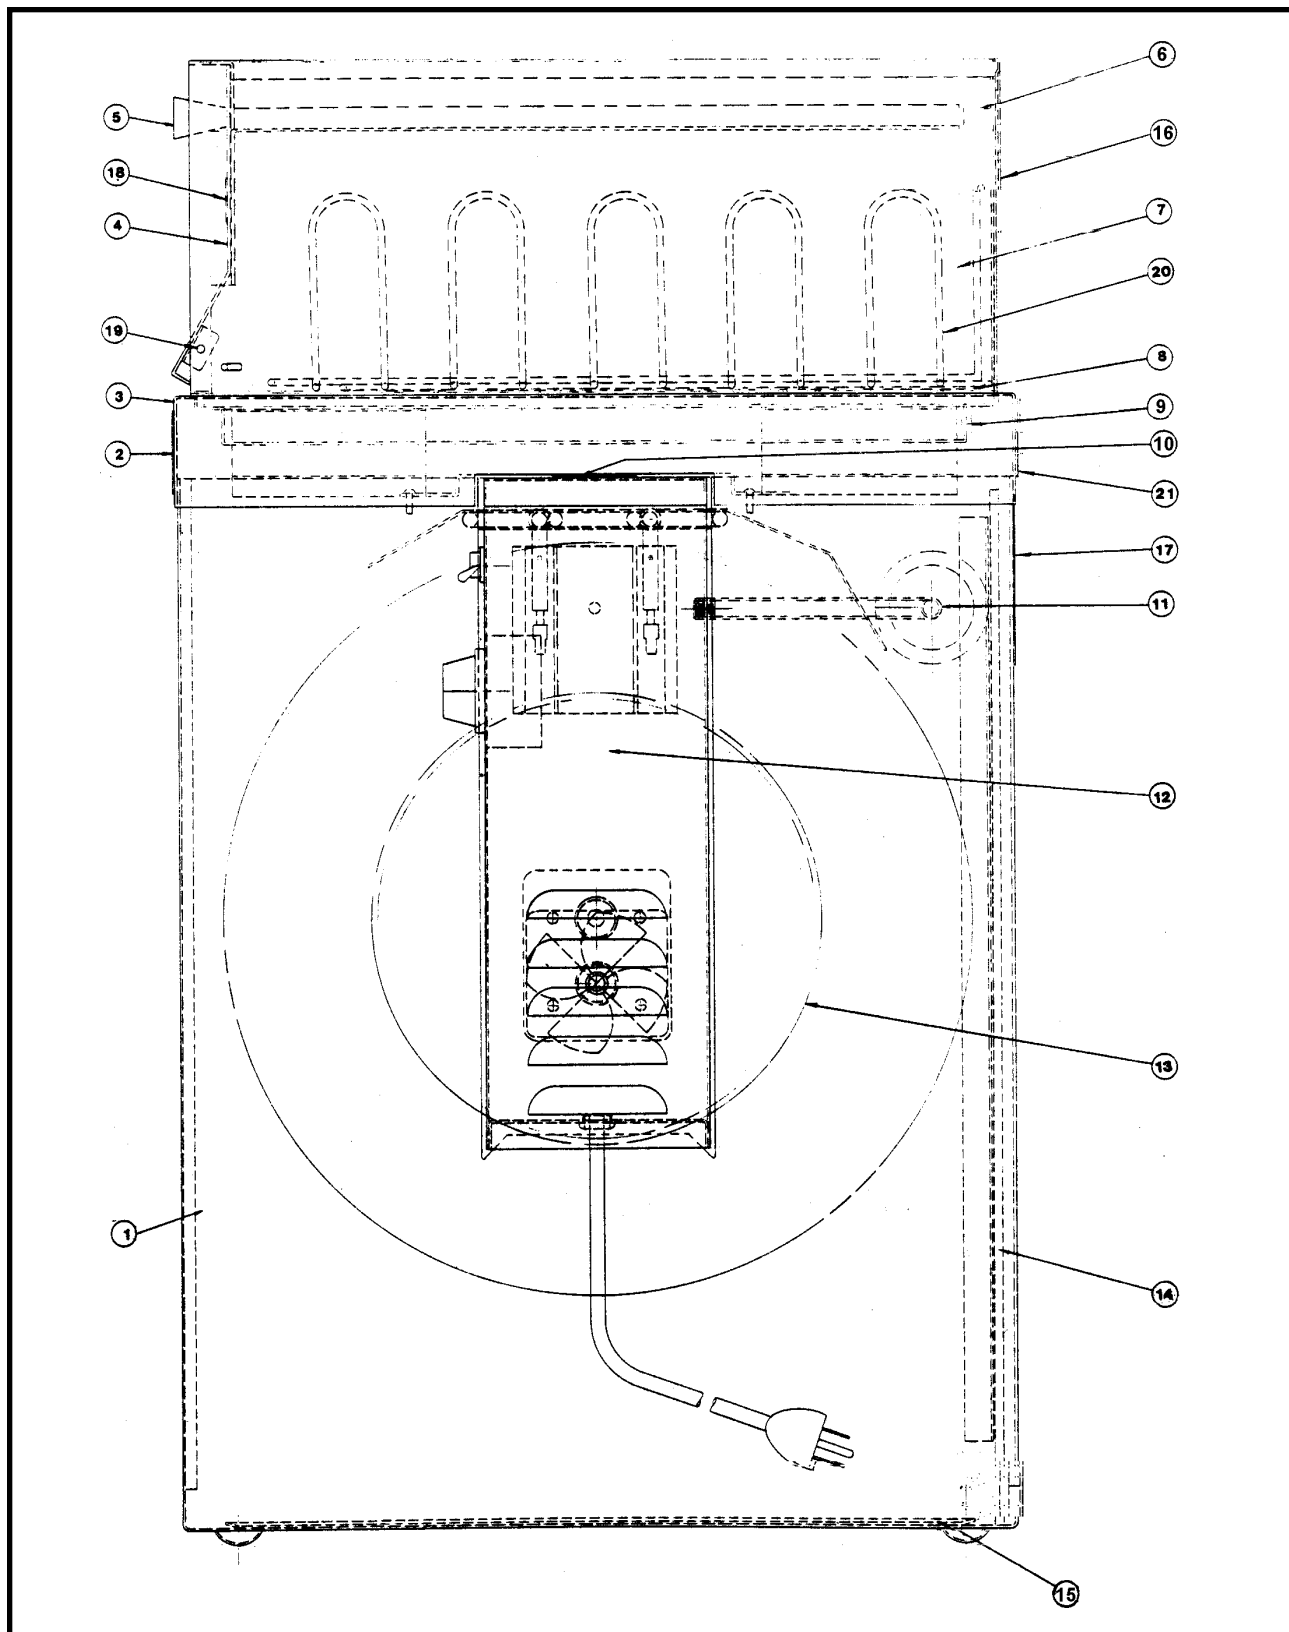


PARTS LIST – MAIN DRIVE ASSEMBLY

Item No.	Part No.	Description	Quantity
1	87289	Rotisserie End Support	1
2	87065	Appliance Light Bulb 120V, 40W	1
3	87220	Heat Reflector Assembly	1
4	87259	¼-20 Hex Grip Nut	2
5	87261	¼ Flat Washer	2
6	74150	#8 Internal Tooth Washer	4
7	87081	Spacer Block Reflector Panel	2
8	49023	Lamp Holder, 90 Degree Mtg.	1
9	87026	Heat Element 120V, 750W	1
10	87298	#8-32 x ¼" Machine Screw	2
11	87258	#8-32 x ¾" RD. HD. Screw	2
12	74117	#8 Flat Washer	3
13	47702	#8-32 Acorn Nut	2
14	87080	Element Tie Down Bracket	1
15	47177	Warning Label, Max. Lamp 40W	1
16	87257	Motor Section Weld Assembly	1
17	87097	Lamp Socket Support Tube	1
18	48040	#8-32 x 3/8 Set Screw	2
19	87040	Element Insulator w/ Tubes	1
20	89128	#8-32 x ½" Ph. Rd. Hd. Screw	5
21	87260	#8-32 Hex Grip Nut	2
22	41033	Pilot Light, 125V Red	1
23	87087	Warning Label, Surface Contact	1
24	87067	⅛" Str. Pipe Lock Nut	2
25	47201	On/Off Switch	1
26	87210	#8-32 x ⅜" Ph. Rd. Hd. Type 23	2
27	87239	Motor Mount Wrapper	1
28	87049	Heat Control Knob	1
29	87297	Heat Control, 120V	1
30	87243	Control Panel Decal	1
31	87149	Warning Label, Caution Disc.	1
32	87060	Drive Motor Assembly, 120V	1
33	22038	15 Amp Plug, Lead-In Cord	1
34	76026	Stain Relief, #SR-6P3-4	1

ITEMS NOT SHOWN

40110	Wire Nut, Black	2
87219	Cable Clamp	1
87280	Heat Element Wire Assembly, White	1
87281	Heat Element Wire Assembly, Black	1
87282	Lamp Socket Wire Assembly, White	1
87283	Lamp Socket Wire Assembly, Black	1
87284	Heat Control Wire Assembly, White	1
87285	Heat Control Wire Assembly, Black	1


CABINET ASSEMBLY

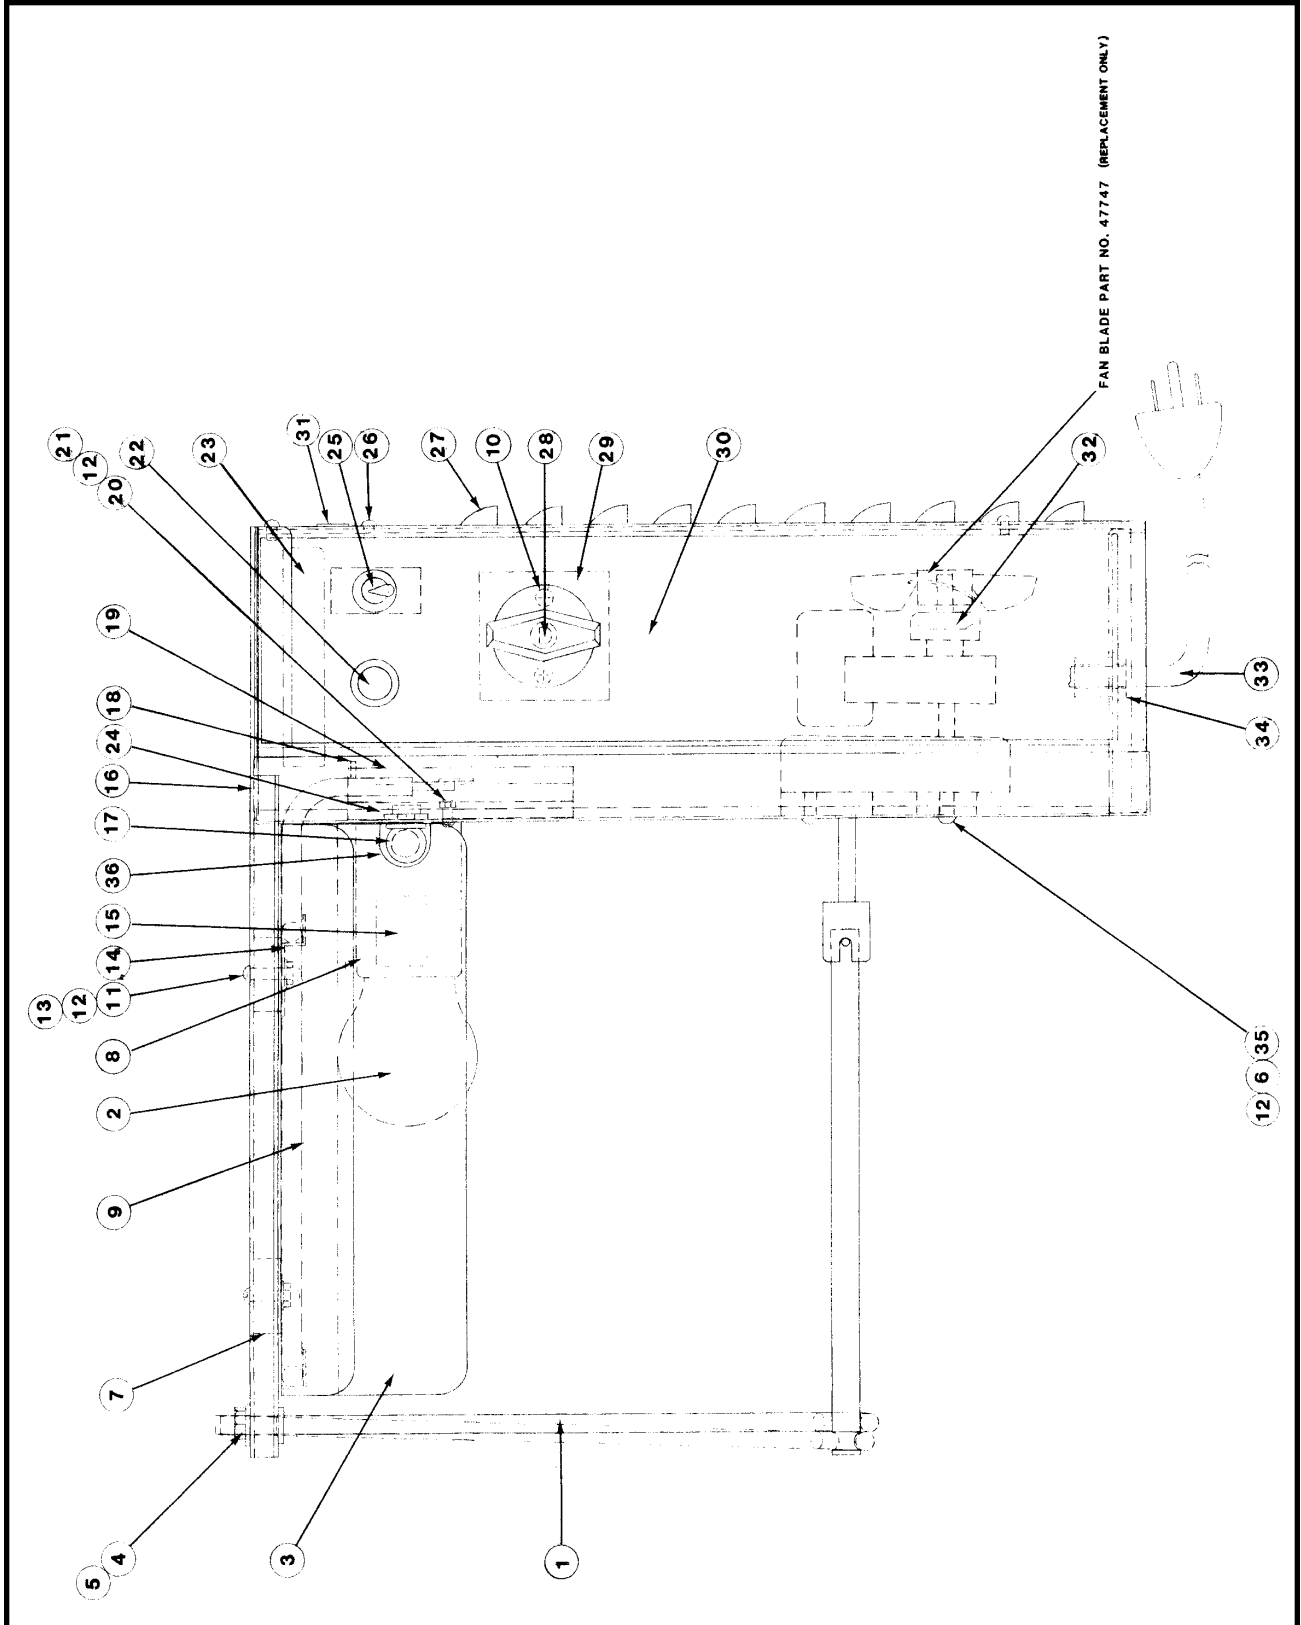

PARTS LIST – CABINET ASSEMBLY

Item No.	Part No.	Description	Quantity
1	87240	Cabinet Weld Assembly	1
2	47010	Label, Safe Operating Instructions	1
3	87250	Band Wrapper Weld Assembly	1
4	87270	Door, Bun Warmer Weld Assembly	1
5	47120	Knob, Lid Lift	1
6	87253	Liner, Condensate	1
7	87226	Bun Warmer Weld Assembly	1
8	87251	Partition, Bottom	1
9	87231	Water Pan	1
10	76097	Warning, Unplug To Clean	1
11	47177	Warning, Max Lamp Size 40 Watt	1
12	87096	Main Drive Motor Section, 120 Volt	1
13	87273	Rotisserie Assembly	1
14	87242	Glass, Front	1
15	87218	Drip Pan	1
16	87228	Decal, Hot and Bun	1
17	87574	Decal, Bun	1
18	87087	Label, Warning Contact	1
19	87292	Pivot Pin, Door	1
20	87293	Bun Basket	1
21	87268	Patent Pending	1
	87149	Label, Caution Disconnect	1
	87233	Wiring Diagram	1
ITEMS NOT SHOWN			
	76135	Tag, Power Cord	1
	87237	Scissors-Type Tongs	1
	87114	Shipping Carton Main Section	1
	87062	Parts Manual	1

ELECTRICAL SCHEMATIC

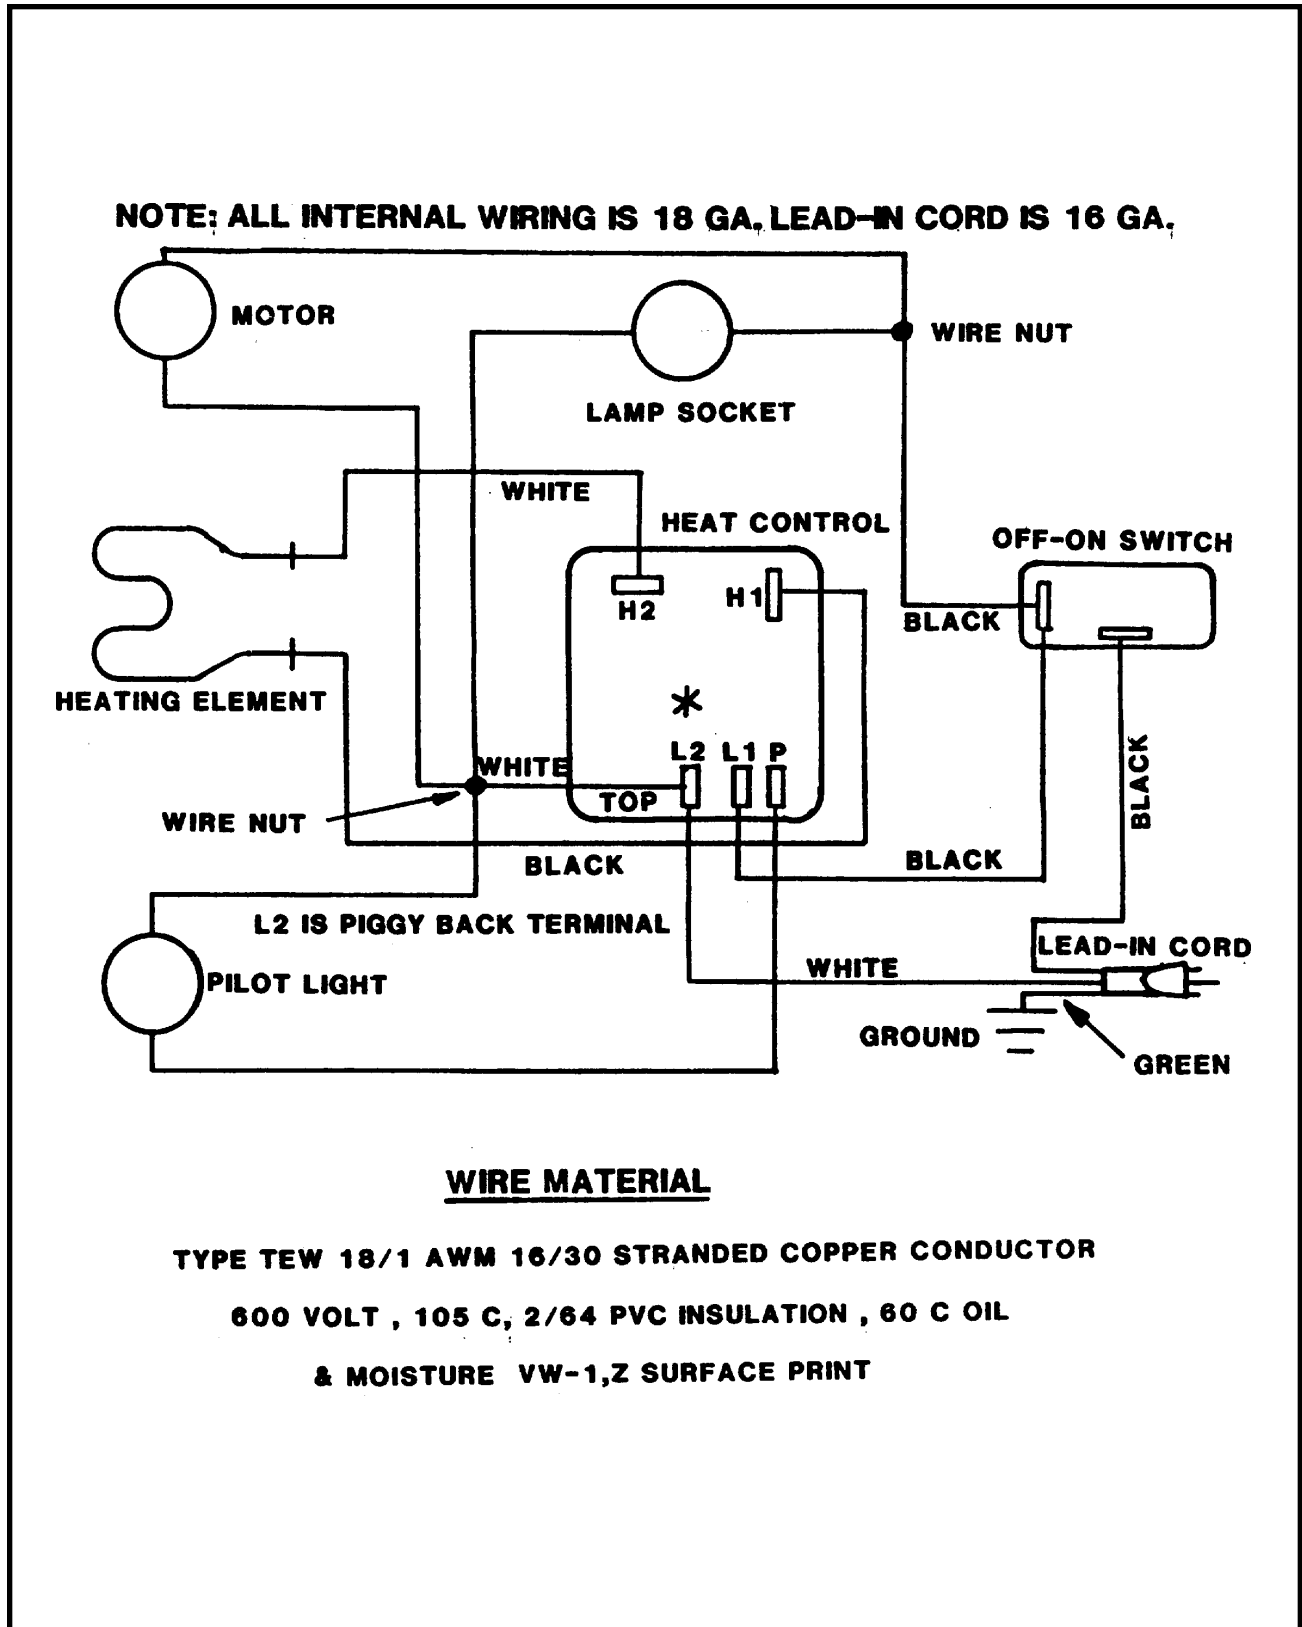

WIRE MATERIAL

TYPE TEW 18/1 AWM 16/30 STRANDED COPPER CONDUCTOR

600 VOLT , 105 C, 2/64 PVC INSULATION , 60 C OIL

& MOISTURE VW-1,Z SURFACE PRINT

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA