


## Cat. No. 734 Remote Fader Installation

Use three conductor shielded cable (Belden 8771) or equivalent. All shields must be connected to the chassis of the CP500 rather than to circuit (audio) ground. This achieves the required RF interference immunity.

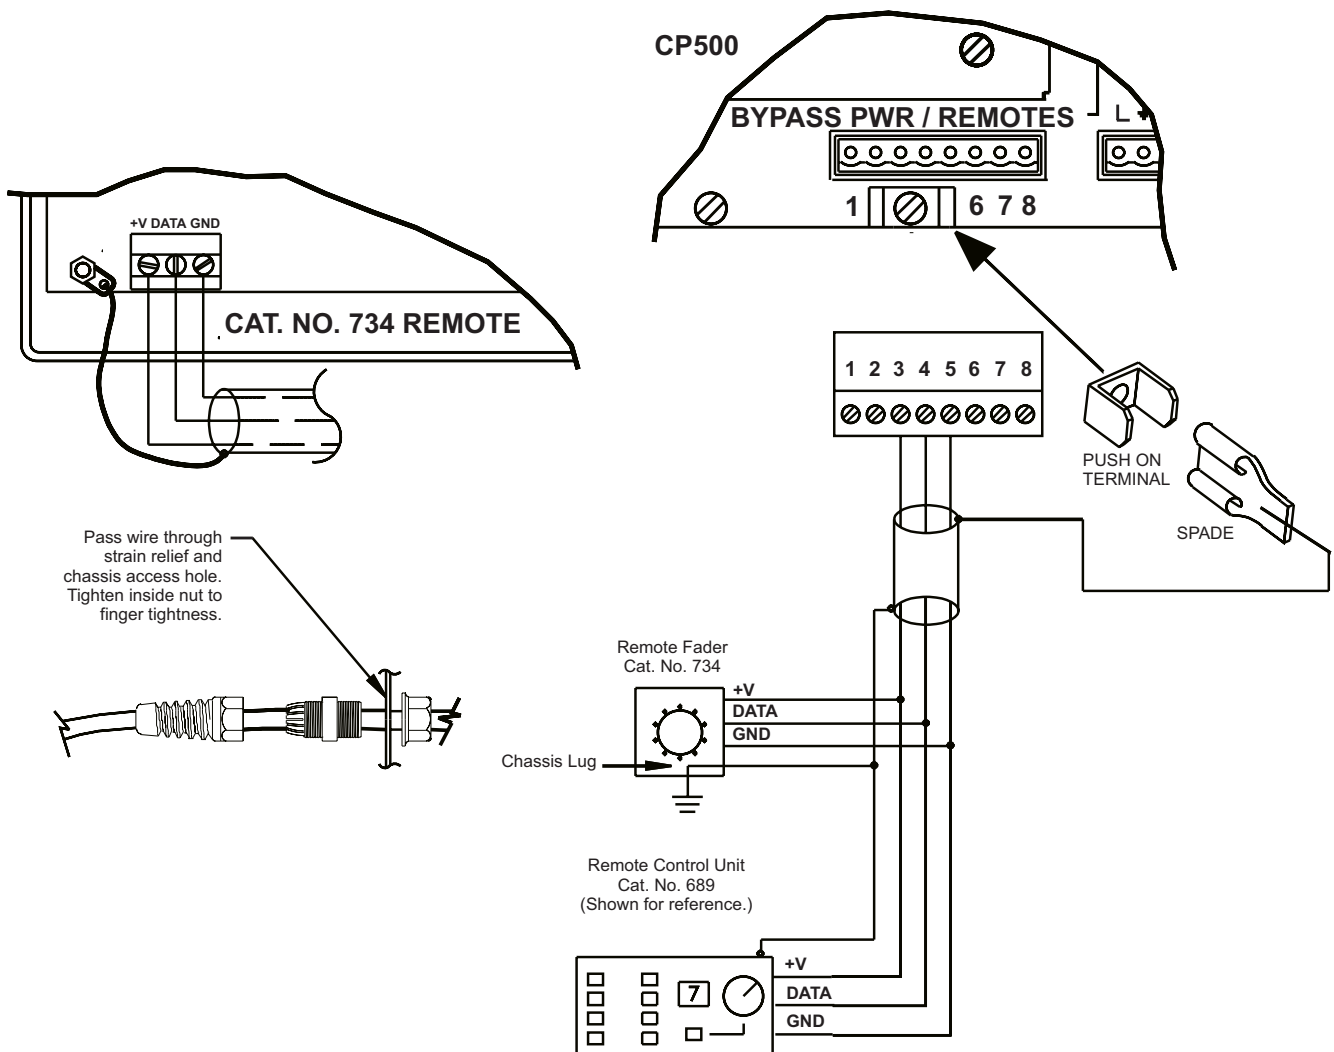

Part No. 91473  
S96/11325