

# *Shavette*

Part No. 29014  
Revised June 1996

## Ice Shaver Instruction Manual Model #1006





 **GOLD MEDAL<sup>®</sup>**


**FUNFOOD EQUIPMENT & SUPPLIES**


Cincinnati, OH 45241-4807 USA


# SAFETY PRECAUTIONS

	<b>⚠ CAUTION</b>
	This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.

	<b>⚠ WARNING</b>
	Always wear safety glasses when servicing this equipment.

	<b>⚠ WARNING</b>
	Never put your fingers or any object into the shaver body (the gooseneck) while the motor is running. Serious injury may occur. <i>(Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).</i>

	<b>⚠ WARNING</b>
	Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment.

	<b>⚠ DANGER</b>
	Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the equipment in water. Always unplug the equipment before cleaning or servicing.

## NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

## INSTALLATION

The Shavette Little Shaver is the finest value in ice shaving on the market today. With only the slightest amount of care, this unit will give years of trouble free service. The shaver is a simple little machine to operate, but in order to get the best results, please read these instructions before you attempt to operate the machine.


Plug in the lead-in cord and flip the motor switch to be sure the motor runs. On the end of the motor is the cutterhead, which is inside the shaver body (gooseneck). The pusher handle is packed in a small separate box and must be connected to the shaver body. The pusher handle goes down the shaver body to press the ice against the revolving cutterhead. The revolving cutterhead shaves the ice.

## MACHINE OPERATION


Start the motor and then fill the gooseneck with ice cubes or block ice, broken into 3 to 4 inch pieces. Fill to about an inch or so from the top (the larger the piece of ice the better the snow). Push the pusher handle down so that the ice presses against the cutterhead. A firm, even pressure is all that is required, but you may need to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and so the cutter gets a better bite. Do not force the handle too much; the motor could be stalled. When more pressure is necessary, relieve the handle and then come down again. Too much pressure on the pusher handle will make the snow come out coarse; too little pressure makes the ice mushy.


In normal operation the motor gets warm. A surface temperature of 150° F is about normal.


Do NOT let any metal get down into the gooseneck or you will ruin the blades. The blades are tempered steel and should last a full season without replacing.

	<p style="text-align: center;"><b>⚠ DANGER</b></p> <p>Never put your fingers or any object into the shaver body while the motor is running. Since you can be seriously hurt if you disobey these instructions, we do not assume any liability for injury due to careless handling or operation of this equipment. Always unplug your machine before cleaning or servicing.</p>
---	--

## MAINTENANCE INSTRUCTIONS

	<b>⚠ CAUTION</b>
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

	<b>⚠ WARNING</b>
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	<b>⚠ DANGER</b>
	Do NOT immerse the equipment in water. Unplug your machine before servicing.

## ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department  
Gold Medal Products Co.  
10700 Medallion Drive  
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676  
Fax: (513) 769-8500  
E-mail: [goldme19@eos.net](mailto:goldme19@eos.net)


## INSTALLING NEW SHAVER BLADES

Unplug the electric line. To replace or sharpen the blades, they must be removed from the cutterhead. The cutterhead must be removed from the motor shaft. There is an allen head setscrew holding the head to the shaft. The setscrew can be reached between the motor and the gooseneck. Remove this screw with the special allen head wrench that came with the machine. Force the cutterhead from the shaft and push it up through the gooseneck. If the cutterhead does not come off easily, then a burr has developed on the motor shaft or corrosion has it stuck.

To force the cutterhead from the motor shaft, remove the motor hold-down bolts and pull back on the motor so that the gooseneck stops the cutterhead while you pull the motor. Before replacing the head, take a fine file and smooth out the burrs on the shaft. After the head is off, you will note that each blade is held on with two brass screws. You can sharpen the old blades but, since the new blades are so inexpensive, most operators just put on a new set. After the new blades are on, tighten the screws until finger tight only. Set the blade height equal to the thickness of a penny from the face of the cutterhead. (See diagram below.) Make sure the height is even across the length of the blade. Tighten the screws. Replace the cutterhead on the motor shaft, making sure the blades do not touch the pusher handle or the head rubs on the back of the gooseneck.

We suggest  $\frac{1}{8}$ " clearance between the pusher handle and blades. This can be obtained by mounting the motor, pushing the cutterhead on with the pusher handle, and pushing it about  $\frac{1}{8}$ " more.


**NOTE:** Replace the shims that were between the motor base and the mounting surface. The motor shaft must be in alignment with the shaver drive shaft. Misalignment will cause the motor coupling to wear rapidly.

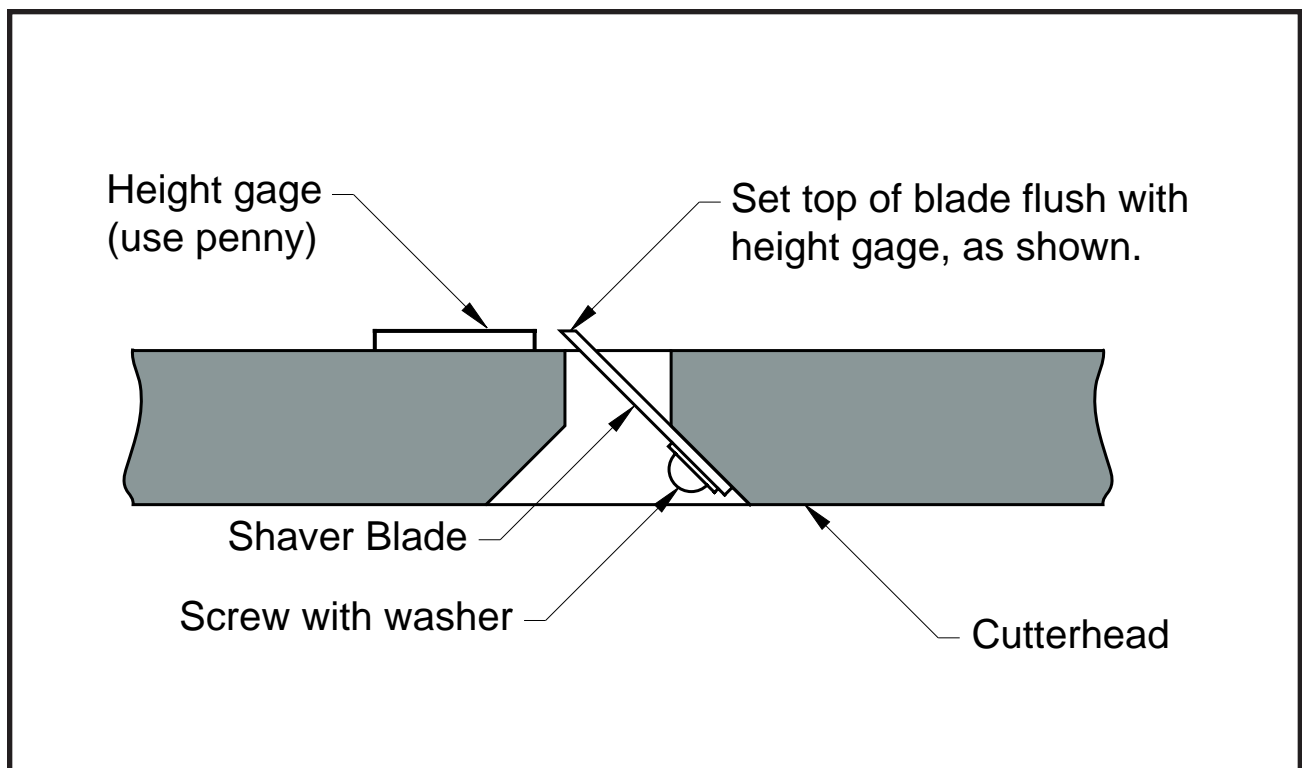

## PARTS LIST – SHAVETTE ASSEMBLY

<b>Part No.</b>	<b>Description</b>
12040	Decal, Front Glass
12062	Warning, Sharp Blades
22005	Pusher Handle
22009	Hopper Casting
22010	Motor Mount Plate
22012	Drive Motor, 120 V
22015	Shaver Head S/K
22018	2 Hole Blade
22020	Ice Pick
22021	Gasket Pusher Handle
29004	Ice Pan
29009	Shipping Carton
29012	Leg, Shavette
29013	Front Skirt
29014	Parts Manual
39066	6 Oz. Sno Dipper
39068	Ice Scoop
40022	Lead-In Cord w/ Switch
76097	Label, Unplug to Clean
76135	Tag, Power Cord

# WIRING DIAGRAM

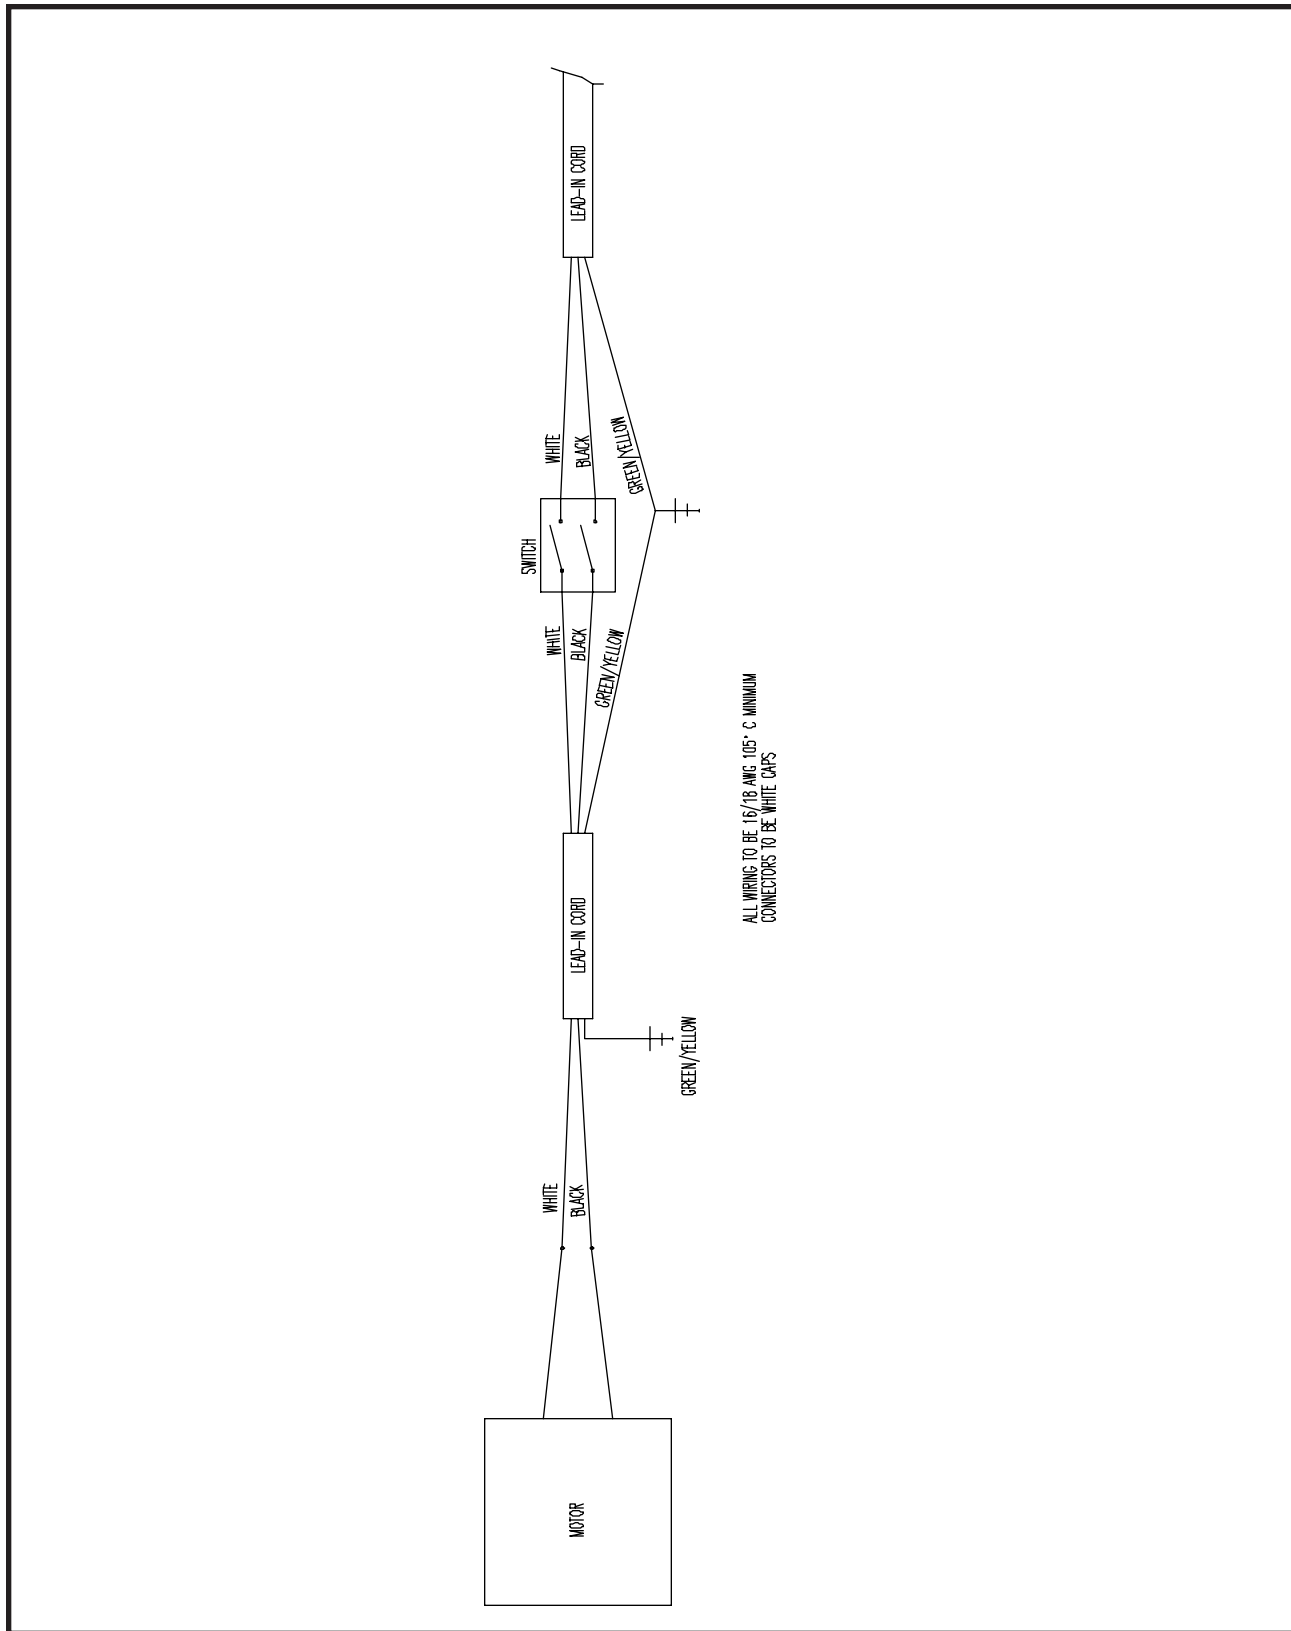

# WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

*NOTE: This equipment is manufactured and sold for commercial use only.*



**GOLD MEDAL PRODUCTS COMPANY**  
**10700 Medallion Drive**  
**Cincinnati, OH 45241-4807 USA**